



CD 360

INSTRUCTION MANUAL

Audioart

Herenweg 15
3602 AM Maarssen
The Netherlands
Telephone: + 31 346 59 02 90
Website: www.vanmedevoort.com
Email: info@audioart.nl

vM INSTRUCTION MANUAL

Thank you for having bought this Van Medevoort product.
We wish you many happy listening hours.

THE MANUAL

It is essential to consult this manual before operating your Van Medevoort product. The numbers in the pictures correspond to the features of this product.

This manual contains everything you need to know to connect this product in addition to various user options. We kindly ask you to read this manual thoroughly before powering up the unit.

The manufacturer accepts no responsibility for any misunderstanding and/or misinterpretation or the consequences arising there from due to this instruction manual not being read correctly and followed properly.

WARNINGS

- Never touch the power cord and/or the unit with moist or wet hands.
- Never expose the unit to rain or moisture.
- Never remove the casing. There are no user-serviceable parts inside.
- Do not poke or put anything inside the unit.

POWER

Every Van Medevoort product is optimized for your country's electrical standards. e.g. 230V-50Hz or 115V-60Hz. This cannot be changed. Please check that your product is set to the correct voltage setting BEFORE connecting to an AC power outlet. Any faulty connection will invalidate the warranty.

COPYRIGHT

In some countries it may be necessary for you to pay a fee for recording and/or playing music. Please check with your country's laws and regulations.

WARRANTY

For warranty information, contact your local vM distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with vM.

BEFORE GETTING STARTED

IN GENERAL

When using your Van Medevoort product make sure that the following is observed:

- The cooling air vents are not covered
- The air can move freely around the product
- The product is sited on a vibration-free surface
- The product is not exposed to (very) high temperatures, cold, moist or dusty environments
- Do not expose the product to direct sunlight
- Do not expose the product to electrostatic discharges
- Never put any type of object directly on top of the product

When in doubt do consult your Van Medevoort dealer. If any object and/or water and/or moisture should find its way into the unit, always disconnect the power cord by its plug, never by the cord itself.

When leaving for extended periods, e.g. holidays, we strongly recommend that you unplug all audio equipment. This is also advisable when there is a thunderstorm or lightning.

CONNECTING

Before actually making any connections, always disconnect the power cord from the wall socket by its plug, never by the cord itself, or switch the product OFF.

Always connect one source at a time and make sure that the output Left & Right channels are not interchanged.

Make sure that the plug is fitted correctly. Otherwise, hum and/or noise may be apparent. DO NOT forget to read the respective manuals of the products you wish to connect to this product, BEFORE connecting.

POSITIONING

If this product is being used at the same time as e.g. a Computer and/or a TV-tuner, you may experience various anomalies. When this is the case, please follow these instructions:

- Position the product as far away as possible from this type of item
- Make sure that the tuner interconnect is detached as far away as possible from all radio and/or TV power cords.
- Usually these anomalies occur when a 300 Ohms cable is used. We advise you to change to a well shielded 75 Ohms cable.

CE MARKING

The CD360 is in conformity with the EMC directive and low-voltage directive.

A NOTE ABOUT RECYCLING

This product's packaging materials are recyclable and can be reused. This product and the accessories packed together are the applicable product to the WEEE directive except batteries.


Please dispose of any materials in accordance with your local recycling regulations.

When discarding the unit, comply with your local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

vM CD360 STEREO CD PLAYER / DAC

Controls
Precautions Connections Maintenance and advice Technical Specifications

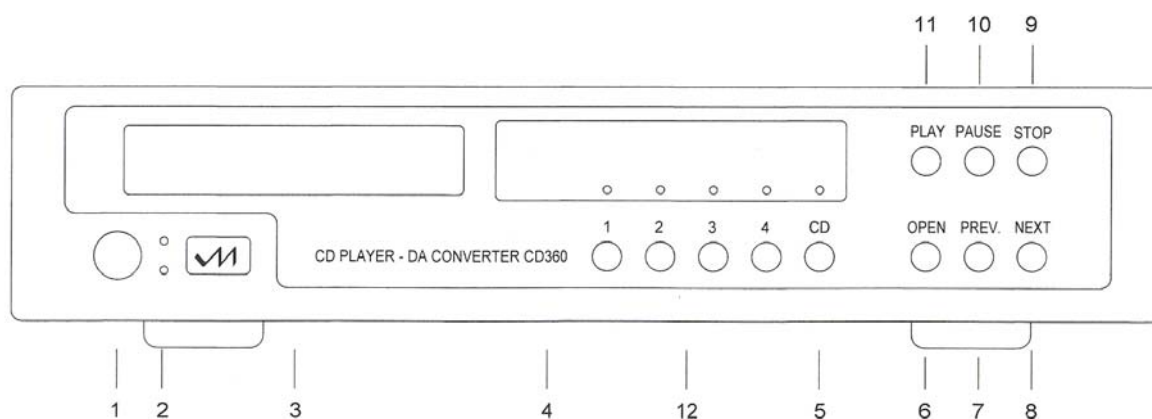

1. ON / OFF. Power switch for switching the mains on the CD360.
2. LED indication control. Fully red when switched ON, 50% red when in STANDBY mode (selected with the Remote Control).


Above the LED you will find the Infra Red sensor for the Remote Control. The functions are "stand-by", repeat, scan, shuffle, time, but also direct track selection.

The Remote Control handset is standard supplied.
 Learnable are also very useful.
 The necessary RC codes can you download from our website.

3. CD tray. Can be opened and closed with switch (6) or the RC (DISC)
4. Display, on which CD info appears like track number, time and control functions. With the RC it is adjustable in 2 positions, on or off, then Led (5) is on. Display and Led 5 are off when DAC inputs 1~4 are selected.
5. Led indicates display on/off when input 5 CD is selected. CD switch to play in the CD mode and switch off the DAC inputs.

vM CD360 STEREO CD PLAYER / DAC

6. OPEN. Switch to open and close the CD tray.
In the display appears the actual status of the player.
7. PREV. To choose previous track.
8. NEXT. To choose next track.
9. STOP. Stops playing the CD.
10. PAUSE. Interrupts CD playing, to restart push PLAY.
11. PLAY. Starts CD playing.
12. Input switches with indication Leds for DAC inputs 1~4.
When CD is loaded, it stops and display goes in off position.

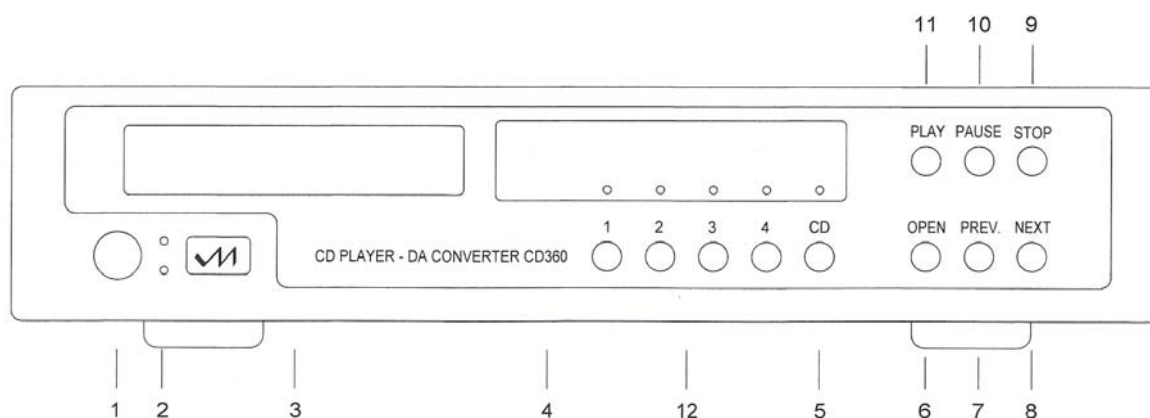

Attention:

Because this machine is first a CD player and second a DAC, all major functions have to be done from the CD positions. When in use as a DAC, switch input 1~4. For CD switch to input 5. The Stand-By on/off status is only available from the CD position, not from DAC, so press first CD on the remote control and then Stand-By. When you switch on with the power switch, the CD360 starts always in the CD mode. Take some time to load the system and then switch to DAC 1~4.

For the Remote Control see the attachment RC2013.


vM CD360 STEREO CD PLAYER / DAC

	Controls	
	Precautions	
	Connections	
	Maintenance and advice	
	Technical Specifications	

- ONLY connect the player to a (professionally installed) wall socket with earth or ground and the corresponding voltage setting, as indicated on the back. Any faulty connection will invalidate the warranty.
- If it is necessary to replace the fuses, use only fuse(s) with the exact same value. The fuse holders are positioned inside the transport and should only be replaced by an authorized Van Medevoort Service Center. There are no user serviceable parts inside.
- The correct order for ON/OFF switching of the various products is as follows:
On: always first the source, then the pre-amplifier, followed by the power amplifier.
Off: always first the power amplifier, then the pre-amplifier, followed by the source.
- To prevent damage to your loudspeakers it is advisable, both at switching ON and OFF to turn the volume control fully to the left. Fully anti-clockwise sets the volume at its lowest level. The same applies when changing sources.
- Do make sure that there is enough space in front of the transport in order to change CD's safely.
- Do not put any magnetic devices near or on top of the transport, e.g. floppy disks. This can cause irreparable damage to such devices.
- If you experience any problems, always contact your nearest authorized Van Medevoort dealer or distributor.

vM CD360 STEREO CD PLAYER / DAC

Controls	
Precautions	
Connections	
Maintenance and advice	
Technical Specifications	

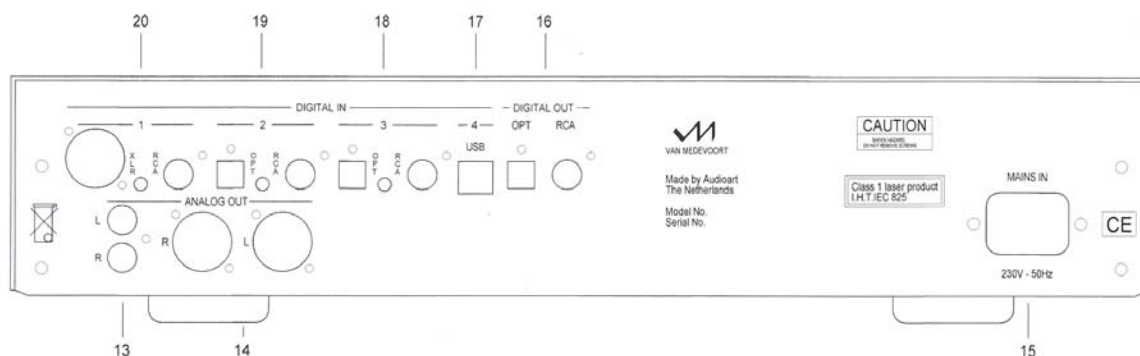

13. Output analog. These analog RCA outputs go to the RCA inputs of the stereo (pre) amplifier. The top one is for the left channel, the bottom one for the right channel.
14. Output analog. These analog XLR balanced outputs go to the balanced inputs of the stereo (pre) amplifier. The right one is for the left channel, the left one is for the right channel. Seen from the back of the converter.
15. IEC Power Chassis Connector. To be connected with the proper wall socket, which must be earthed or grounded. Every Van Medevoort product is optimized for your country's electrical standards. e.g. 230V-50Hz or 115V-60Hz. This cannot be changed. Please check that your product is set to the correct voltage setting BEFORE connecting to an AC power outlet. Any faulty connection will invalidate the warranty.
16. Output digital SPDif coaxial and optical TosLink, send through the signal of the input which is switched on.
17. Input 4 digital is the USB input, to connect to a PC, where after the PC can use this DAC as a soundcard.
18. Input 3 digital, is also switchable between SPDif optical (switch left) and SPDif RCA (switch right)
19. Input 2 digital, is also switchable between SPDif optical (switch left) and SPDif RCA (switch right)
20. Input 1 digital, is also switchable between AES/EBU XLR (switch left) and SPDif RCA (switch right).

vM CD360 STEREO CD PLAYER / DAC

Controls Precautions Connections	
Maintenance and advice	
Technical Specifications	

- The digital outputs are clocked for the different digital inputs.
By switching over between inputs, there can be a synchronicity moment occur where by the transport stays in the mute mode. In that situation, the CD360 can be reset by switching off with the power switch for approximately 10 seconds and then again to on.
- The SPDif RCA and optical outputs are able to transmit digital stereo signals to converters capable to receive, 16bit/44.1kHz when CD is playing (standard CD format). When used as DAC, the digital outputs send through the signal and format of the input which is switched on.
- All audio CD's, CD-R's and CD-RW's can be played without a problem only when they are produced following the Red Book protocol.
- For your convenience you will find a red sticker, indicating the mains "phase". The phase of your electricity system can be determined with a voltage seeker.
- The transport must only be cleaned with a cloth, impregnated with a Ph-neutral cleaning fluid. And it must be mildly moist! NEVER use strong fluids and/or erasers. Before cleaning ALWAYS remove the power cord from its wall socket, by its plug not by its cord.
- The optimum operating temperature is reached after approx. several hours of continuous play. Then it will be possible to start enjoying the superb van Medevoort audio qualities of this transport. Test this time in your own setup.
- We strongly recommend that you use a high quality interconnect cable. E.g. the renowned van Medevoort Silver Cable. Also for the power cords.
- For other questions, please contact your dealer.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

vM CD360 STEREO CD PLAYER / DAC

Controls
Precautions
Connections
Maintenance and advice

Technical Specifications

cd mechanism	vM TEAC
Conform	Red Book protocol
signal format	16 bit PCM – 44.1kHz
disc format / support	CD, CD-R, CD-RW / 80 + 120mm (IEC908)
input SPDif RCA / XLR	24 bit / 192 kHz 75 Ohms / 110 Ohms
input SPDif optical	24 bit / 96 kHz
input USB	16 bit / 48 kHz
output SPDif	0.5 Volt p/p RCA
outputs analog / connections	2 / RCA, XLR
output SPDif	0.5 Volt p/p RCA
output XLR	AES/EBU 4 Volt p/p XLR
power supply	115/230 Volt – 50/60 Hz
dissipated power	5/15 Watt stand-by/on
cabinet	steel
weight	9.5 kg
dimensions (incl. feet)	434x88(102)x390 mm (wxhxd)
finish	black (satin), front plate: silver

- accessoires: Power cord
User manual
Remote Control Handset (no batteries included)
- available options: vM SILVER CABLE

Audioart is the manufacturer of the complete Van Medevoort product line. Next to the renowned Van Medevoort Silver Cable Audio cables we can also supply you with various high quality accessories. For more information visit our website or do consult your dealer or distributor.

Audioart, Herenweg 15, NL-3602 AM Maarssen, Netherlands
tel. +31(0)346 59 02 90, info@audioart.nl , www.vanmedevoort.com

Specifications are subject to change without prior notice.
Copyright © 2013 Audioart / The Netherlands

vM CD360 STEREO CD PLAYER / DAC

REMOTE CONTROL FUNCTIONS FOR CD and DAC



STBY	To switch the power ON or in Stand By mode (CD)
MUTE	Mute the vM amplifier when connected
AMP	
DAC	
CD	Select first the device to control CD or DAC
1~0	Use these buttons to select tracks directory (CD)
1~4	Use these buttons to select inputs (DAC)
NEXT	Skip button selects next track (CD) or input (DAC)*
PREV	Skip button selects previous track / input (CD/DAC)*
DISP	<i>All controls below are only for CD functions.</i> To switch display on or off
REP	Repeat, press once for track, twice for disc
TIME	To see track time played, remain and disc remain
PAUSE	To interrupt your playing, to restart push PLAY *
FAST FORW.	Search fast through the track forward
PLAY	Play a inserted CD *
FAST BACK	Search fast through the track backward
STOP	Stop all functions *
SHUF	Plays CD tracks in random sequence
FAST	To speed up the search functions back and forward
A-B	
DISC	Button to determine repeat start and end points
PROG	Opens and close the disc tray *
SCAN	To program selected tracks **
	Scan skip to next track after 10 seconds
	* function buttons also on front panel
	** press PROG > 1th track number > PROG > 2nd track number > PROG > 3rd track number > PROG > PLAY
VOL +	Volume up on the connected vM amplifier
VOL --	Volume down on the connected vM amplifier

Specifications are subject to change without prior notice.
Copyright © 2011-2013 Audioart / The Netherlands